ASSEMBLY INSTRUCTIONS

MODEL#:RL5676

NOTE: Only the technical personnel can be allowto fix and maintain.

IMPORTANT!

Make sure that the power is switch off at the electricity mains supply before commencing work.

FIXING INSTRUCTIONS

1. Take out screw (4) and rotate it into crystal lifting ring (7) (at least 6mm) and then tightened with washer (6) &hexagonal nut(5).
2. Rotate the nut of screw(4) till close to the first nut and then rotate screw (4) into batten(13). Make sure screw (4) should go through batten(13).
3. Use outlet box screws (12) to fix batten (11) on outlet box (1).
4. Tighten the nut to fix on batten (11) in the right position.
5. Ground Connection (See picture 1): there are one tapping hole & two dimples. Wind the supply ground wire (2) on the green ground screw (15) and then put it into tapping hole. Connect the fixture ground wire (3) with supply ground wire (2) by connecting terminal (10). Caution: DO NOT connect ground wire with supply power wire.
6. Connect fixture supply wire (7) with power supply wire (9). Caution: Remember to distinguish the positive and negative charges. (See picture 2)
7. Push canopy (8) up to the ceiling.
8. Screw bulb (16) in the holder.

REPLACEMENT BULB

Do not exceed the maximum wattage.
Light bulbs recommended: RL5676 -GU10 5 x 50W Max

CLEANING CARE

Clean with a soft dry cloth.

SAFETY INFORMATION

1. Lamp used must in rated voltage, and do not touch the bulb with bare hands . Always switch off the electricity supply and allow to cool for 10 minutes before changing the light bulbs.
2. If the external cables have been demaged, Pls change or repair by manufacturer or service agency or professional electrician, In order to avoid the danger.

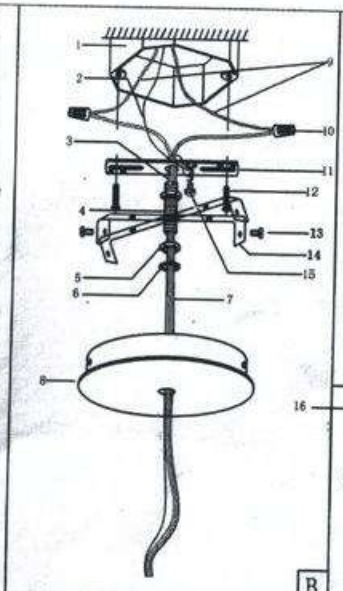

1. Outlet bo
2. Supply gr
3. Fixture g
4. Screw
5. Hexagonal
6. Washer
7. Fixture s
8. Canopy
9. Power sup
10. Connecti
11. Batten
12. Outlet b
13. Screws
14. Batten
15. Green gr
16. Bulb

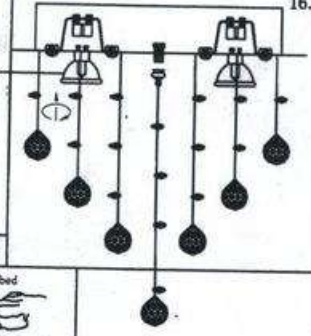

B

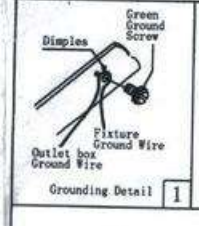

Grounding Detail 1

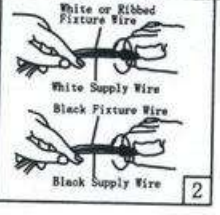

2